



Littlite LLC PO Box 430/10087 Industrial Drive Hamburg MI 48139-0430 USA  
Phone 810-852-4242 Fax 810-231-1631

**July 2013**

### **Reorienting Pin Inserts on the Littlite LLX XLR connector**

Some applications might require the pin inserts in the XLR connector to be rotated to a different position. The Littlite LLX was designed with that in mind and here is the easy process. You'll need a Phillips head screws driver and a pair of needle-nose pliers.

Our standard 4-pin XLR configuration positions the gooseneck at the top of the arc created by the four pins. **(Figure 1)**



**Figure 1**

Remove the small set screw on the outside of the LLX barrel **(Figure 2)** and pull out the pin insert. Be careful not to break the wires or lose the small hex nut inserted in the pin insert disk. **(Figure 3)**



**Figure 2**

**Figure 3**

Carefully turn the pin insert to the desired location, line up the receiving nut in the pin insert with a hole in the LLX and reinstall the set screw. Be careful not to pinch the wires.



**Figure 4**



**Figure 5**

**If you have questions regard this process, please contact the factory at (810) 852-4242 or [info@littlite.com](mailto:info@littlite.com).**